
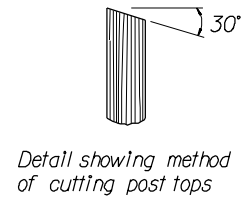


**FENCE GROUNDING
DETAIL**

BARBED WIRE FENCE WITH WOOD GATE

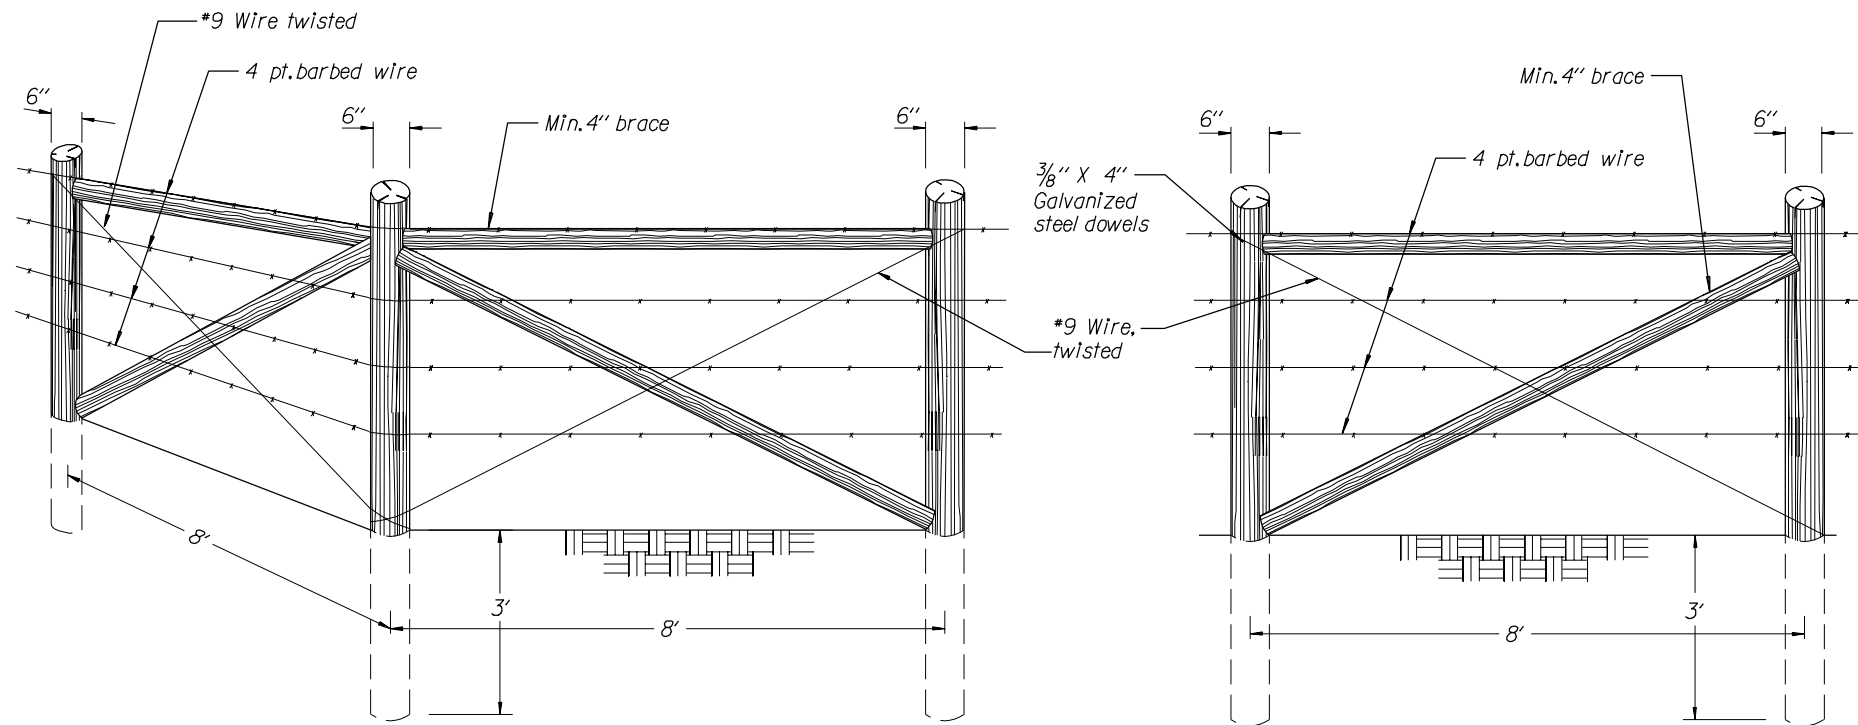

CORNER BRACE
(To be used when corner angle is 15° or over)

Place diagonal 4" brace in direction of pull.
Notch posts for the 4" diagonal braces. All diagonal
4" braces to have 2 galvanized 12d nails at each end.

LINE BRACE
(Maximum spacing 500')
Line braces also to be used when
vertical alignment changes 15° or more

Notes :

1. Install fence and gates at locations shown on the plans or as staked by the CO.
2. Gate width to be shown on the plans.

Not to Scale

U.S. DEPARTMENT OF TRANSPORTATION
FEDERAL HIGHWAY ADMINISTRATION
EASTERN FEDERAL LANDS HIGHWAY DIVISION

DETAIL

**FENCE,
BARBED WIRE**

REVISIONS:
DETAIL APPROVED FOR USE --/----

DETAIL
E619-2